


DIRECTION 237

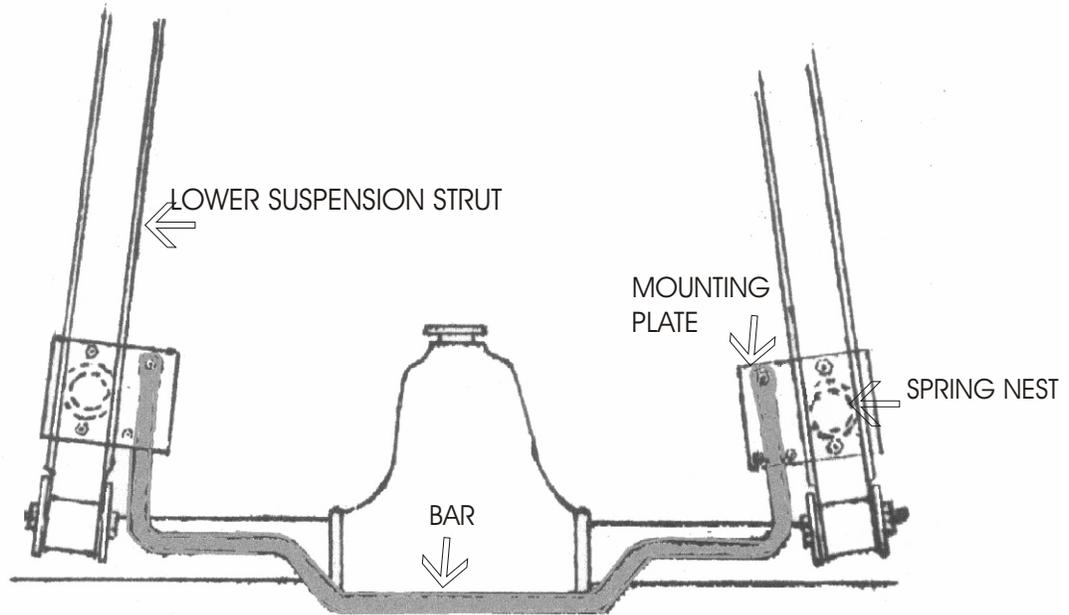

DIRECTION 237

- Step #1.** Attach the sway bar to the reinforcing plates using the two-inch bolts and U-bolts. The U-bolts may need to be bent slightly to fit the plates.
- Step #2.** With plates attached to the bar it should be held up under the car in position.
- Step #3.** With the bar in position against the bottom of the lower suspension strut, mark it for drilling.
- Step #4.** Drill the strut with a 3/8" drill bit and bolt the sway bar on.
- Step #5.** Have someone bounce the rear of the car while; you check clearance of all parts throughout the suspension travel distance. If all is clear, tighten all nuts.
- Step #6.** Road test the car and familiarize yourself with your cars greatly improved handling characteristics. As we cannot supervise your installation, or your driving, we cannot be held responsible for more than the cost of the kit.

NOTE: This kit should be used in conjunction with our front bar.

Hardware	
2 RH 039 Plates	2 RH 400 U-Bolts
4 RH 102 Washers	2 RH 213 Bolts
10 RH 304 Lock-Nuts	4 RH 205 Bolts