


DIRECTION 375

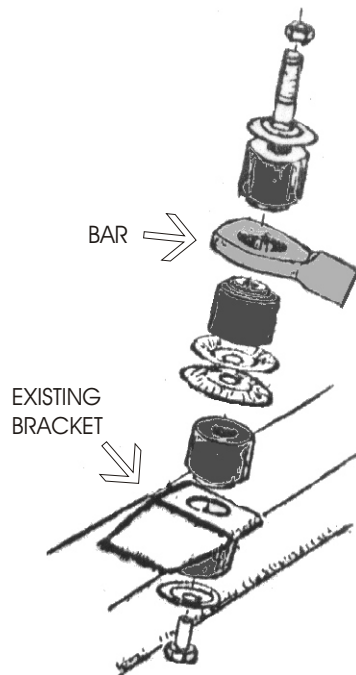

DIRECTIONS 375

This heavy-duty anti-sway bar is designed to replace the light duty existing bar on the car. The only difference, being the use of heavy-duty, vertical end-link assemblies. Installation is just the opposite of removal of the old bar.

As we cannot supervise your installation, or your driving, we cannot be held responsible for more than the cost of the kit.

NOTE: For best balance and control, this kit should be used in conjunction with our front bar kit #745.

HARDWARE:

2 RH 043

2 RH 507

2 RH 013

Brackets

Bushings

End-Links